


adaptation, distribution or other infringement will be prosecuted.



### LAUREL SHELVING LVR00354/LVR00334

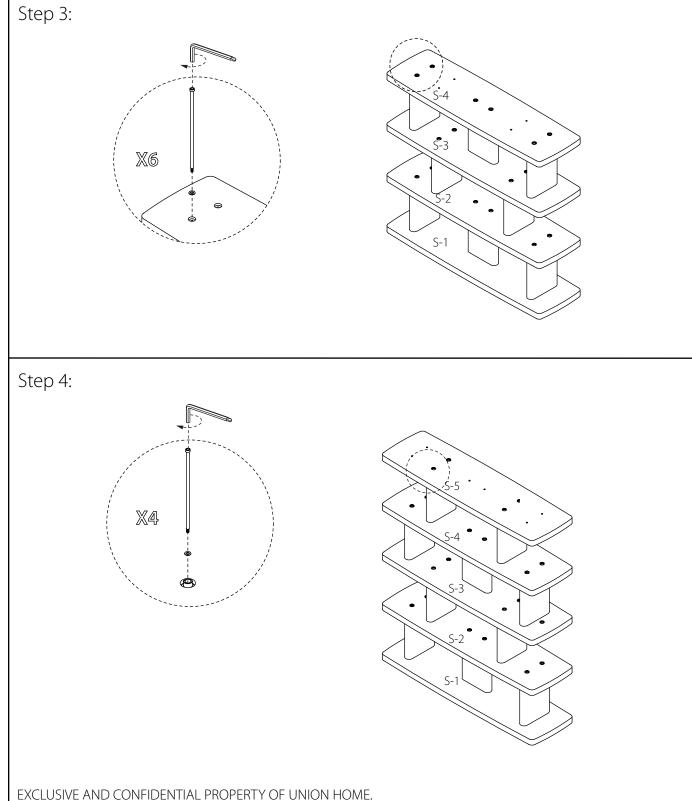



All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

# union home


### LAUREL SHELVING LVR00354/LVR00334

Step 5:

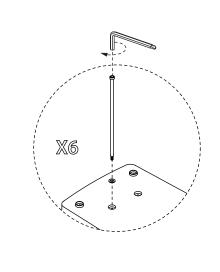

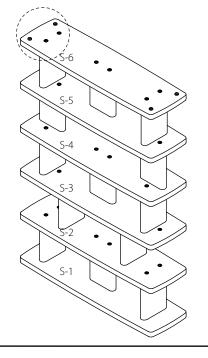

Step 6 :

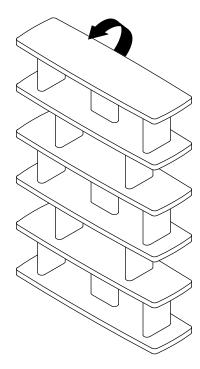


EXCLUSIVE AND CONFIDENTIAL PROPERTY OF UNION HOME. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

Page 4 of 5

## MOD SIDEBOARD CARVED LVR00253



union home

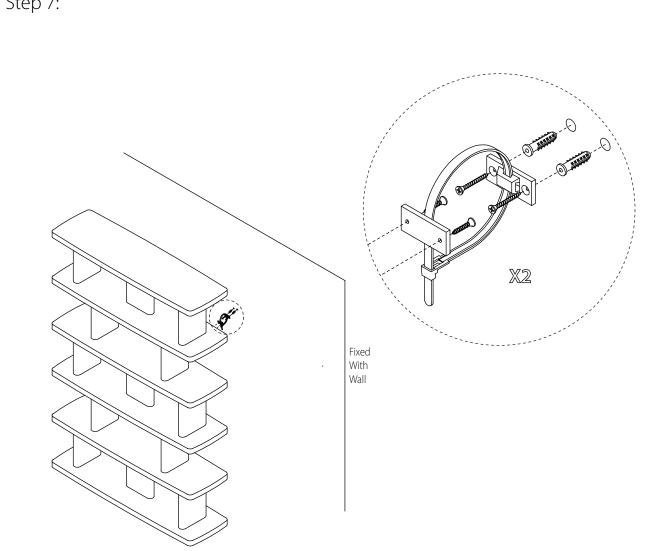

#### Anti Tip Kit Installation

1) Using screws provided and a screwdriver, secure mounting plate(s) to the back of product.

2) Noting the location of the product's mounting plate(s), mark and drill holes on the wall for mounting plate(s). Drill pilot holes into marked positions and into a wall stud. NOTE: if wall studs are not available, drill holes slightly smaller than the drywall anchors and insert each anchor until its flange is flush with the wall.

3) Using a screwdriver, secure mounting bracket(s) to the wall stud or drywall anchors with screws provided. 4) Position product in final location, and secure to the wall by lacing one end of plastic tie(s) through both the wall and product mounting plates, and through the other end, pulling tightly to remove slack. Do not over tighten.

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF UNION HOME. All rights reserved, including all applicable copyright, design and patent rights. Any unauthorized reproduction, adaptation, distribution or other infringement will be prosecuted.

Page 5 of 5